



OWNER'S GUIDE

PRODUCT LINE:
NORTHRIDGE SERIES

MODEL NUMBERS:
FSN24 For use with N24 loudspeakers **FSN26** For use with N26 loudspeakers

PRO SOUND COMES HOME™

THANK YOU FOR CHOOSING JBL

For more than 50 years, JBL has been involved in every aspect of music and film recording and reproduction, from live performances to the recordings you play in your home, car or office.

We're confident that the JBL products you have


chosen will provide all of the enjoyment that you expected – and that when you think about purchasing additional audio equipment for your home, car or office, you will once again choose JBL.

Please take a moment to complete the enclosed

profile card. It enables us to keep you posted on our latest advancements, and helps us to better understand our customers and build products that meet their needs and expectations.

JBL Consumer Products


INCLUDED

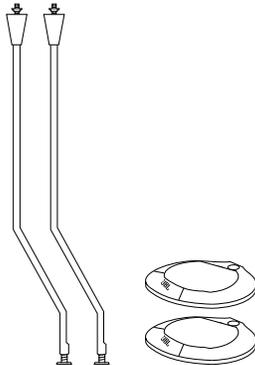

Two floor-stand posts, with "knurled" nuts, cone-shaped fittings, and 19mm-long hex head bolts installed.

Two weighted bases.

ASSEMBLY

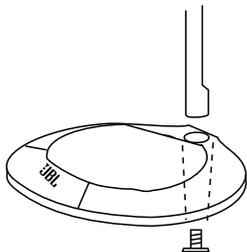


1. Unscrew the bolt from the bottom of the post.
2. Insert the post into the hole at the rear of the base.
3. Orient the post so that the openings near the top and bottom of the post face toward the rear of the base, making sure that the alignment fin on the shaft fits into its corresponding

recess in the back of the hole on the base.

4. Slip the bolt up through the hole in the bottom of the base and into the threaded hole in the bottom of the post.
5. Check the alignment of the post and base; tighten firmly using a 3/4-inch socket wrench.

WIRE HOOKUP

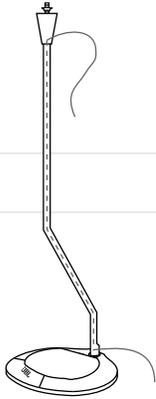


“Fish” the speaker wire through the stand posts and bring it out through the round hole on the cone-shaped fitting.

ATTACH SPEAKER

1. While looking at the top of the stand, turn the “knurled” nut (a) that is installed on top of the threaded shaft (b), by hand clockwise, until it is seated against the top of the stand post (c).

2. Place the speaker on top of the stand, with its stand-attachment hole on the bottom aligned with the stand’s threaded shaft (b).

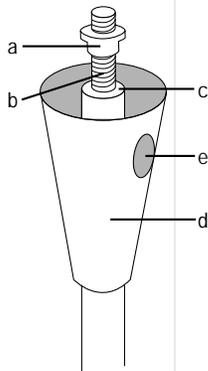

Be careful when starting the threads to avoid cross-threading (misaligning the threads – see Step 3); cross-threading may damage the speaker and/or the stand.

3. Once the threads are properly aligned and engaged (if the threads are not properly engaged, the speaker will not easily rotate on the shaft), turn the speaker clockwise (while looking at the top of the speaker) 8 to 10 turns. The speaker should by then be securely attached to the stand post. Make sure that the speaker grille is facing forward.

4. Using a suitable wrench (not included), securely tighten the “knurled” nut (a) up against the bottom of the speaker until the floorstand post and the speaker are fully locked together, so that neither can be rotated by hand.

5. Pull the cone-shaped fitting (d) up against the speaker bottom, with its speaker wire hole (e) toward the back.

6. Connect the speaker wires to the speaker as outlined in the speaker’s owner’s manual.

JBL PRO SOUND COMES HOME™

JBL Consumer Products
 250 Crossways Park Drive, Woodbury, NY 11797
 8500 Balboa Boulevard, Northridge, CA 91329
 800-336-4JBL (4525) (USA only)
 www.jbl.com

©1999 JBL, Incorporated.

JBL is a registered trademark of JBL, Incorporated.

Part No. FSN24/FSN26 O/G

A Harman International Company