

JBL ON TIME™ 200P

AM/FM RADIO AND SPEAKER DOCK FOR iPod/iPhone



iPod not included/iPod non inclus

USER GUIDE

English.....	2
Français.....	16
Deutsch.....	30
Italiano.....	44
Español.....	58
Nederlands.....	72
한글.....	86
Dansk.....	100
Japanese.....	114
中文.....	128
Русский.....	142
Svenska.....	156
Suomi.....	170
Norsk.....	184



IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ THE FOLLOWING PRECAUTIONS BEFORE USE:

- Read these instructions, heed all warnings and keep for future reference.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings; a minimum distance of 10mm around the entire apparatus is required for sufficient ventilation.
- No naked flame sources, such as lighted candles, should be placed on or near the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- The apparatus is to be used in moderate climates only.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatuses (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at the plugs and convenience receptacles, and at the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, or the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- To be completely disconnected from the power input, the main plug of the AC/DC adapter shall be disconnected from the main.
- The main plug of the AC/DC adapter should not be obstructed OR should be easily accessed during intended use.
- The marking information is located at the bottom of the apparatus.
- The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- The apparatus and AC/DC adapter shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus and AC/DC adapter.
- TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). THERE ARE NO USER-SERVICEABLE PARTS INSIDE THIS UNIT. PLEASE REFER SERVICING TO QUALIFIED HARMAN CONSUMER GROUP, INC., SERVICE PERSONNEL.
- Never remove grille covers in order to service the speaker system. The speaker system does not contain any user-serviceable parts.

IMPORTANT NOTE FOR ALL ELECTRONIC PRODUCTS:

Before inserting or unplugging audio cables from the source device's headphones or line-level output jacks, it is good practice to turn off the device first. This will prolong the life of your unit, help protect your device from static electricity and prevent potential damage.

FCC STATEMENT AND WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any special accessories needed for compliance must be specified in the instruction manual.

MODIFICATIONS NOT EXPRESSLY APPROVED BY THE MANUFACTURER COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT UNDER FCC RULES.

The normal function of the product may be disturbed by strong electromagnetic interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in another location.

 <p>THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU TO DANGEROUS VOLTAGE INSIDE THE PRODUCT.</p>	<p>CAUTION RISK OF ELECTRIC SHOCK – DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU TO IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.</p>	<p>WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.</p> <p>WARNING: THE APPARATUS SHOULD NOT BE EXPOSED TO DRIPPING OR SPLASHING AND NO OBJECTS FILLED WITH LIQUID, SUCH AS VASES, SHOULD BE PLACED ON THE APPARATUS.</p>	<p>IMPORTANT: THE APPROPRIATE ADAPTER MUST BE INSTALLED BEFORE INSERTING YOUR iPod/iPhone INTO THE JBL® PRODUCT. MAKE SURE THAT THE CONNECTOR FOR THE iPod/iPhone IS PROPERLY ALIGNED WITH THE JBL PRODUCT'S CONNECTOR WHEN INSTALLING YOUR iPod/iPhone. FAILURE TO DO SO MAY CAUSE PERMANENT DAMAGE TO THE CONNECTOR FOR THE iPod/iPhone, RENDERING THE iPod/iPhone INOPERABLE.</p>
--	--	---	---	---

JBL ON TIME™ 200P

The JBL On Time™ 200P high-performance loudspeaker dock and clock radio for iPod/iPhone will revolutionize the way you listen to your radio, use your iPod/iPhone, and wake from a good night's sleep.

The JBL On Time 200P system is a revolution in time travel. Imagine waking up to music on your favorite station or your iPod/iPhone, with no more buzzer or bad radio reception. The compact time machine and sound center, when connected to your iPod/iPhone, MP3 player or other music source, produces clean, powerful sound while providing time-keeping, alarm and radio features. The system is the world's first time machine with an intuitive user interface that is easier than ever to navigate.

The JBL On Time 200P loudspeaker dock has full ability to navigate your iPod via IR remote. Also, not only can you wake up to your favorite radio station or song on your iPod/iPhone, but with the multiple alarm setting option, you can set up to seven different alarms for "His" and "Hers," at whatever day or frequency needed.

EVERCHARGE TOPOLOGY

The JBL On Time 200P speaker dock charges your iPod/iPhone, even when it's not connected to the computer or the system is off. The system's memory is maintained by a backup battery. Even with the power out, it will provide the alarm function.

COE (COMPUTER-OPTIMIZED EQUALIZATION)

The JBL On Time 200P system equalization is computer-optimized to provide a rich, complete soundstage.

OCT (OPTIMIZED COMPRESSION TOPOLOGY)


The JBL On Time 200P radio and loudspeaker dock utilizes a proprietary compression technology to ensure clean, accurate sound at high output levels.

DISPLAY

The large, backlit LCD enables easy viewing and menu navigation. Automatic dimming sets the correct brightness level in any room environment.

UNPACKING YOUR JBL ON TIME™ 200P

Carefully unpack your speaker system and identify all its components:

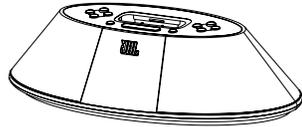


JBL On Time™ 200P



Adapters for
iPod/iPhone



 IR remote




Power supply



FM antenna




Audio cable

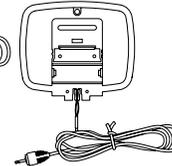

AM antenna

QUICK SETUP INSTRUCTIONS

- Choose the appropriate adapter for iPod/iPhone and place it into the docking station. Then place your iPod/iPhone into the adapter.
- For backup memory, install three AAA batteries in the battery compartment underneath the unit.
- Connect the external AM antenna for better reception.
- Unwind the FM antenna and straighten the wire for the best reception.
- Plug the power adapter into the "DC In" jack and then plug the adapter into a wall outlet.
- If an additional audio source is used, connect the source to the "Aux In" jack.

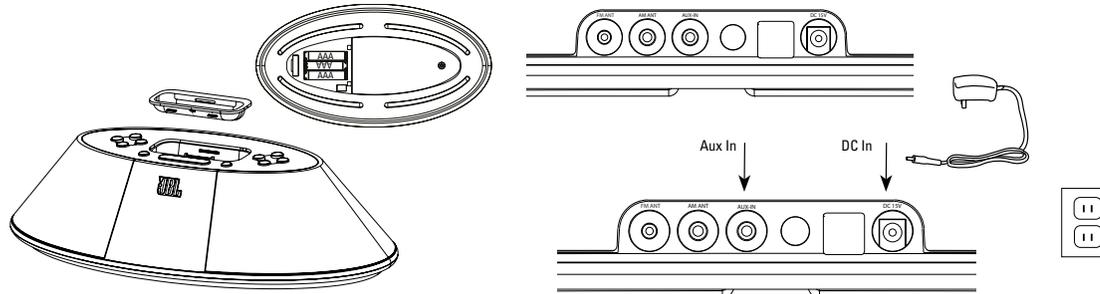


CONTROLS

Setting the Clock

1. Press Menu/Up Level at any screen to display Top Menu (may require repeated presses, depending on which menu state the unit was previously in).
2. Use Up/Down arrows to highlight Clock. Press Enter to confirm.
3. Use Up/Down arrows to highlight 12-hour or 24-hour format. Press Enter to confirm.
4. Use Up/Down arrows to set Hour. Press Enter to confirm. Minute field becomes highlighted.
5. Use Up/Down arrows to set Minutes. Press Enter to confirm. AM/PM field becomes highlighted.
6. Use Up/Down arrows to set Day of Week. Press Enter to confirm. The clock is set!

Note: During clock-setting, if there is no user input for 2 seconds, display will return to the Now Playing screen. Press any one of the Enter, Up/Down arrows, or Menu/Up Level to return to setting selection.

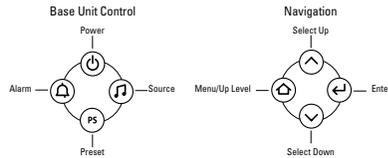

Playing Music

1. Press Source button to select the source (iPod/iPhone, AM, FM, Aux).
2. Press “+” button to increase volume.
3. Press “-” button to decrease volume.

Languages/Region

1. Press the Menu/Up Level button until you reach the Top Menu screen.
2. Use Up/Down arrows to select Region and press Enter.
3. Use Up/Down arrows to select language. Press Enter.
4. Use Up/Down arrows to select radio band region type. Press Enter.

Radio Tuning



1. If AM or FM radio is already selected and playing, use Up/Down arrows to tune frequency; hold either button and release to scan for the next station.
2. Otherwise, press Source until FM or AM is selected.
3. Tune to the desired frequency using Up/Down arrows; hold either button and release to scan for the next station.

Setting Presets

1. While listening to AM/FM radio, press and hold Preset for 2 seconds.
The Radio Preset screen will be displayed.
2. Use Up/Down arrows to select slot to store preset. Press Enter to confirm.
Preset is stored!

To Select a Preset for Listening

1. Press Preset once at any screen to display the Preset list.
2. Use Up/Down arrows to highlight Preset. Press Enter to confirm. Preset station will begin playing!

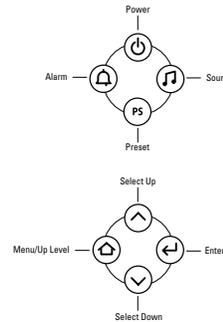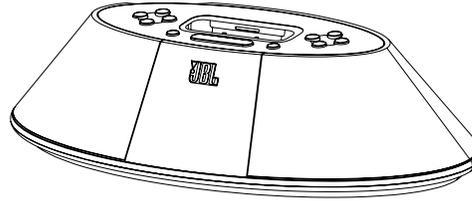

CONTROLS (CONT.)

Alarm Setting†

1. Press Menu/Up Level at any screen to display Top Menu (may require repeated presses, depending on which menu state the unit was previously in).
2. Use Up/Down arrows to highlight Alarm. Press Enter to confirm; or press Alarm to go directly to the Alarm menu.
3. Use Up/Down arrows to select an Alarm slot to edit. Press Enter to confirm. Hour field becomes highlighted.
4. Use Up/Down arrows to set Hour. Press Enter to confirm. Minute field becomes highlighted.
5. Use Up/Down arrows to set Minutes. Press Enter to confirm. AM/PM field becomes highlighted.
6. Use Up/Down arrows to set AM/PM. Press Enter to confirm.
7. Use Up/Down arrows to set Day of Week, Weekdays, Weekends, Everyday or One-Time. Press Enter to confirm.
8. Use Up/Down arrows to set Alarm source. Press Enter to confirm. Alarm is set!

Note: During alarm-setting, if there is no user input for 2 seconds, display will return to the Now Playing screen. Press any one of the Enter, Up/Down arrows, or Menu/Up Level to return to setting selection.

† Use this same procedure to modify a previously set Alarm.


To Enable/Disable a Set Alarm

1. Press Menu/Up Level at any screen to display the Top Menu (may require repeated presses, depending on which menu state the unit was previously in).
2. Use Up/Down arrows to highlight Alarm. Press Enter to confirm; or press Alarm to go directly to the Alarm menu.
3. Use Up/Down arrows to highlight Alarm. Press Alarm to enable/disable the alarm.
An icon will be displayed on the left when the alarm is enabled, and the alarm will sound at the set time.

Waking to the iPod/iPhone

1. Use the steps under Alarm Setting and choose "iPod" as the source.
2. On your iPod/iPhone, choose the song you would like to awaken to and press Play.
3. Set the volume level on the JBL On Time™ 200P unit.
4. Put your iPod/iPhone to sleep by holding down the Play/Pause button (older iPod models may vary).
5. The JBL On Time 200P system can be put to sleep by pressing the Power button.

Note: If you choose the last song on your iPod/iPhone, please place the iPod/iPhone in repeat mode, which will ensure that the iPod/iPhone will continue playing past the last song.

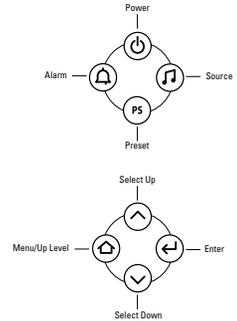

Screen Contrast/Brightness

1. Press the Menu/Up Level button until you reach the Top Menu screen.
2. Use Up/Down arrows to select Display and press Enter.
3. Use Up/Down arrows to select Brightness or Contrast. Press Enter.
4. Adjust settings using Up/Down arrows.


Note: To set brightness to Auto, press the Down arrow until Auto is highlighted.

Sleep Timer

1. Press the Menu/Up Level button until you reach the Top Menu screen.
2. Use Up/Down arrows to select Sleep and press Enter.
3. Use Up/Down arrows to select minutes and press Enter.
4. The sleep timer is started and the unit will power off when the timer reaches zero.


Snooze Timer Set

1. Press and hold the Snooze button for 3 seconds until you reach the Set Snooze Timer screen.
2. Use Up/Down arrows to select minutes and press Enter.
3. Snooze feature will use this value the next time it is activated.

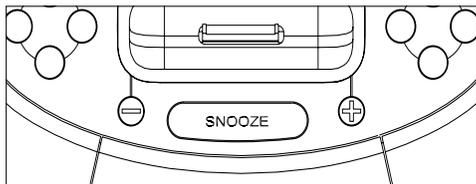


REMOTE NAVIGATION


Button	Function
	Turns main unit power on and off. Button is active in any menu state.
	Presets the hot key. A single press brings up the preset screen from any menu. Repeated presses cycle through the preset list to the next preset slot. Press and hold for 2 seconds when listening to the radio and the Now Playing screen is displayed, to store current radio station.
	Volume Increase. Display changes to Volume screen. Increases volume level, turns Amps on if off, then increases volume. If in snooze mode, cancels snooze mode and turns Amps on. Times out back to current menu.
	Volume Decrease. If in snooze mode, no action. If not in snooze mode and Amps are on, displays changes to Volume screen and decreases volume level. Times out back to current menu. Does not turn Amps on if off.
	Enter or Selection Confirmation button. Confirms selection on any JBL On Time™ 200P settings screen. If Now Playing screen is displayed, returns to last-used menu screen.
	Scroll Up/Tune Up. Moves highlighted box up on any JBL On Time 200P menu setting screen. Increases digit value when setting Time (hours and minutes) and Snooze Timer. In radio mode, manually increases tuning frequency; hold for Seek.
	Scroll Down/Tune Down. Moves highlighted box down on any menu setting screen. Decreases digit value when setting Time (hours and minutes) and Snooze Timer. In radio mode, manually decreases tuning frequency; hold for Seek.
	Menu or Up Level button. If Now Playing screen is displayed, takes user to top-level menu screen. If in menu settings, steps up one level to previous field or menu screen. Hold for 2 seconds to return to Now Playing screen.
	Alarm hot key. Takes user to Alarms settings of menu tree. Button is active in any menu state. If alarm is sounding, turns alarm off. When viewing alarms list, enables or disables selected alarm.
	Snooze button and Snooze Timer setting hot key. If alarm is sounding, enables snooze mode. Press and hold for 2 seconds to enter Snooze Timer setting screen.
	Directly switches the JBL On Time 200P source to iPod/iPhone.
	Sends Scroll Down command to iPod/iPhone navigation. Works in iPod/iPhone navigation only.
	Sends Scroll Up command to iPod/iPhone navigation. Works in iPod/iPhone navigation only.
	Cycles to next source. AM → FM → iPod/iPhone → AUX.
	A single press starts sleep time countdown, using currently set timer. Press and hold for 2 seconds to enter Sleep Timer setting screen (similar to base unit).
	Next Track in iPod/iPhone navigation only. Does not affect JBL On Time 200P menu navigation or function.
	Previous Track in iPod/iPhone navigation only. Does not affect JBL On Time 200P menu navigation or function.
ENTER	Enter/Select in iPod/iPhone navigation only. Does not affect JBL On Time 200P menu navigation or function. Similar function to the center button of the iPod/iPhone.
MENU	Menu/Up Level in iPod/iPhone navigation only. Does not affect JBL On Time 200P menu navigation or function. Similar function to the Menu button of the iPod/iPhone.
	Play/Pause/Mute button. When iPod/iPhone is the active source, a single press sends the Play/Pause command to the iPod/iPhone. When AM, FM or AUX is the active source, a single press mutes audio/amp on the JBL On Time 200P system.

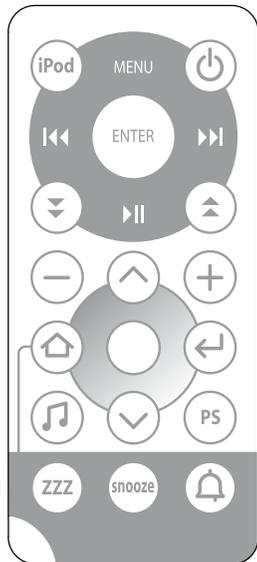

JBL ON TIME™ 200P MENU TREE

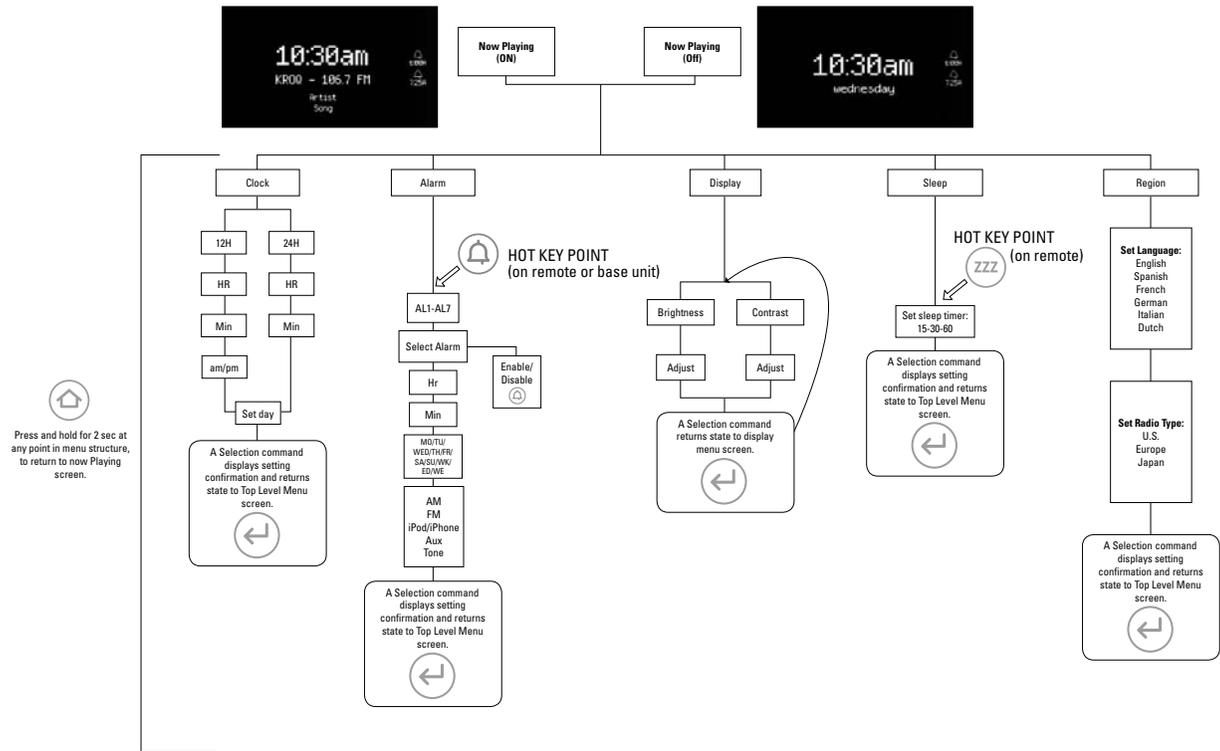

JBL ON TIME™ 200P MENU TREE (CONT.)

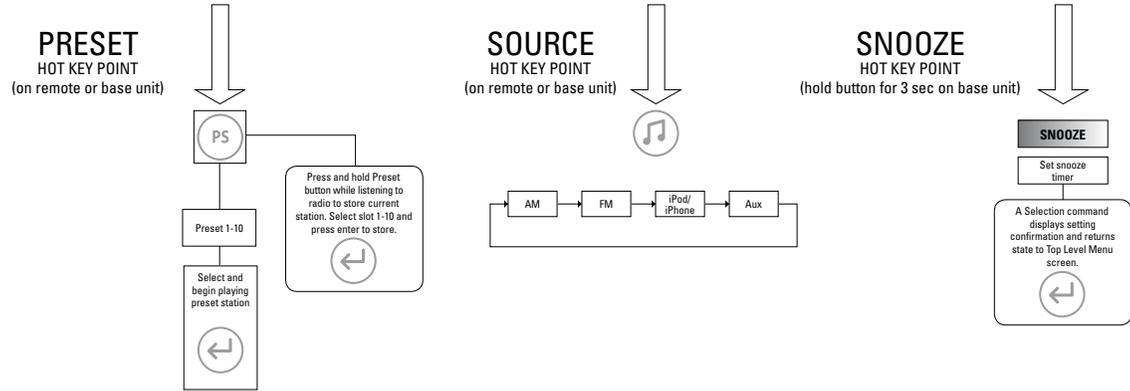

SPECIFICATIONS

JBL ON TIME™ 200P

Frequency Response: 70Hz – 20kHz

Power Consumption: 30 Watts maximum

JBL On Time™ 200P Transducer: Phoenix SE
1-3/4" (45mm) x 2 (full range per channel)

Power: 2 x 6 Watts

Input Impedance: >5k Ohms

Signal-to-Noise Ratio: >80dB

Input Sensitivity: 350mV RMS for rated power output
Power (USA/Canada): 120 Volts, 60Hz AC

Power (Europe/UK): 220 – 230 Volts, 50Hz or 60Hz AC

Power (Japan): 100 Volts, 50Hz or 60Hz AC

Power (Australia): 240 Volts, 50Hz or 60Hz AC

UL/CUL/CE-Approved

Dimensions: 11-3/16" x 5-3/4" x 2-3/4"
(W x D x H) (284mm x 146mm x 70mm)

Weight: 1.8 lb (0.8kg)

Remote Battery: CR2025



Do not dispose of electrical appliances as unsorted municipal waste; use separate collection facilities:

Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

IMPORTANT: Use UM4/AAA/LR03 alkaline-type nonrechargeable batteries only.

TROUBLESHOOTING

SOUND QUALITY

Symptom	Possible Problem	Solution	Note
No sound from the JBL On Time™ 200P unit	No power to the unit	Make sure the wall power outlet or power strip has power. Make sure all switches for outlet/ power strip are on and that all switches for speaker system are on.	Is the display on? If not, power is not getting to your JBL On Time 200P; try the solutions shown.
	Incorrect source selection	Make sure the correct source is selected; choose FM radio as a source. Turn up the volume. Check the system with a known good source, such as your iPod/iPhone. Connect the Aux In cable to the headphone jack on your iPod/iPhone.	
No sound or weak signal from the AM/FM radio	Bad reception from current location	Reposition your JBL On Time 200P unit until you find better reception.	If you are still getting a weak signal from AM broadcasts, connect the external AM antenna to the AM antenna jack.
	Interference	Check surrounding area for any possible interference; wrap up any excess cables.	
Sound comes from one side/channel only	iPod/iPhone or audio cable is not seated properly	Make sure the iPod/iPhone or Aux In cable is seated all the way into the JBL On Time 200P unit.	If you want to use a longer cable, make sure it's a 3.5mm mini-jack stereo male-to-male cable.
Distortion (static, crackling or hissing sounds)	Noise may be caused by interference from a monitor, cell phone or other transmitting device	Turn monitor off to see whether noise is eliminated. Move JBL On Time 200P unit's cables farther away from monitor.	
	JBL On Time 200P unit is being over-driven by an amplified audio source	Make sure the unit is connected to an appropriate source device. Make sure all signal cables are inserted snugly into receptacles.	
	Volume level may be too high	Check volume of source device; some devices will distort the output signal if the volume is set to maximum.	
Too much bass or treble	Check the EQ setting on your iPod/iPhone or source device	We recommend that the source device EQ be set to Flat or Off.	
JBL On Time 200P unit emits a loud hum or buzzing noise	Input cables are not plugged in properly	Check input cable connection.	
Speaker system experiences radio frequency interference or picks up a radio station	Input cable may be picking up interference	Wrap up excess input cable to make it as short as possible. Purchase a ferrite clamp and attach it over the input cable; a clamp can be purchased at your local electronics store.	


TROUBLESHOOTING

CHARGING AND SYNCING

Symptom	Possible Problem	Solution	Note
iPod/iPhone will not charge	Wrong adapter is used	Make sure correct adapter is used for your specific iPod/iPhone model.	
	The iPod/iPhone is not making full contact with the docking station	Make sure the iPod/iPhone is seated securely into the docking station.	

CLOCK SET AND CLOCK MEMORY

Symptom	Possible Problem	Solution	Note
Clock is not set to correct time	Incomplete setup	Be sure to follow the clock setting procedure through, to the end. A confirmation screen will be displayed when set completely.	
JBL On Time 200P unit does not retain memory settings when there is a power outage, or if the unit is unplugged	There are no batteries installed in the unit	Make sure you install three AAA batteries in the base of the JBL On Time 200P unit.	
	Batteries may be low	If you have installed three AAA batteries, replace them, as they may be defective.	

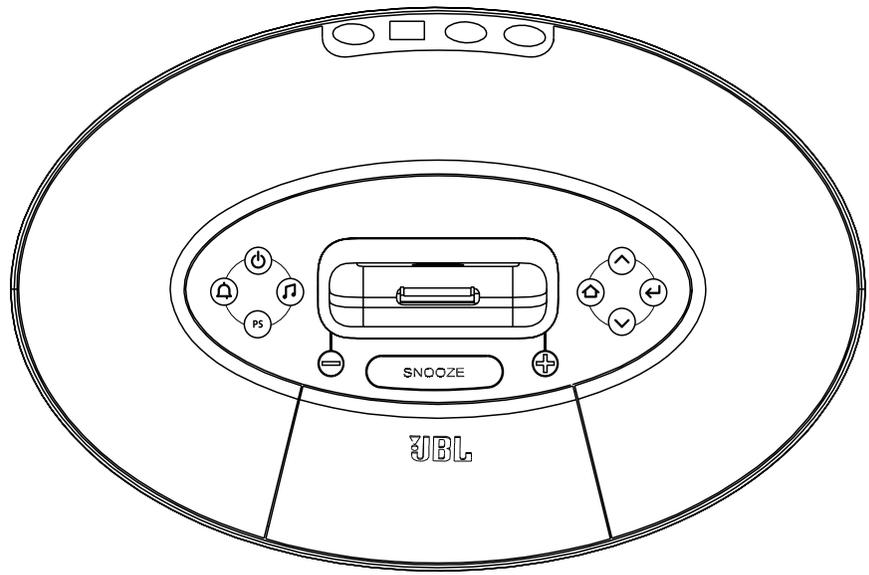

JBL is a trademark of Harman International Industries, Incorporated, registered in the United States and/or other countries.

JBL On Time is a trademark of Harman International Industries, Incorporated.

iPod is a trademark of Apple Inc., registered in the U.S. and other countries. "Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards. "Works with iPhone" means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

JBL est une marque commerciale de Harman International Industries, Incorporated, déposée aux États-Unis et/ou dans d'autres pays.

JBL On Time est une marque commerciale de Harman International Industries, Incorporated.

iPod est une marque commerciale de Apple Inc., déposée aux États-Unis et dans d'autres pays. « Made for iPod » signifie que le dispositif électronique a été spécialement conçu pour se connecter à l'iPod et qu'il est certifié par le développeur comme conforme aux normes de performance Apple. « Works with iPhone » signifie que le dispositif électronique a été spécialement conçu pour se connecter à l'iPhone et qu'il est certifié par le développeur comme conforme aux normes de performance Apple. Apple n'est pas responsable du fonctionnement de ce dispositif ou de sa conformité avec les normes de sécurité ou réglementaires.

Harman Consumer Group, Inc.

8500 Balboa Boulevard, Northridge, CA 91329 USA

516.255.4525 (USA only)

www.jbl.com

© 2008 Harman International Industries, Incorporated. All rights reserved. Tous droits réservés.

Document Number: 950-0264-001 REV. A

H Harman International



®