

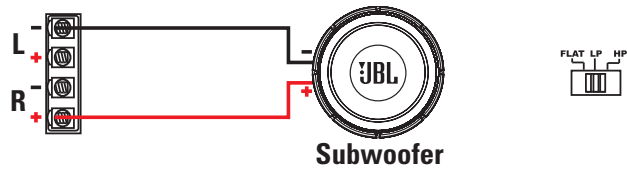
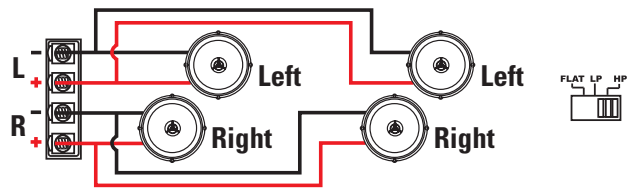
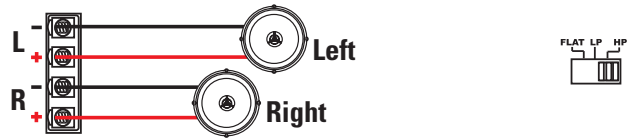


JBL AMPLIFIER QUICK-START GUIDE








GTO75.2 II

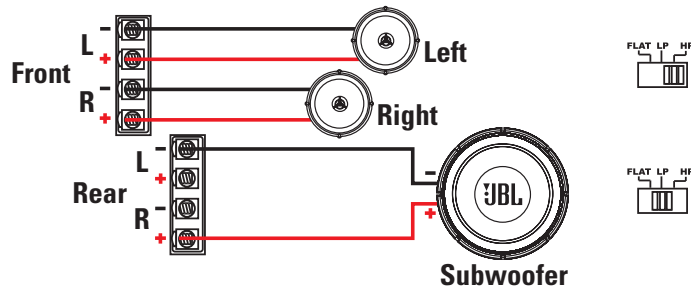



GTO75.4 II

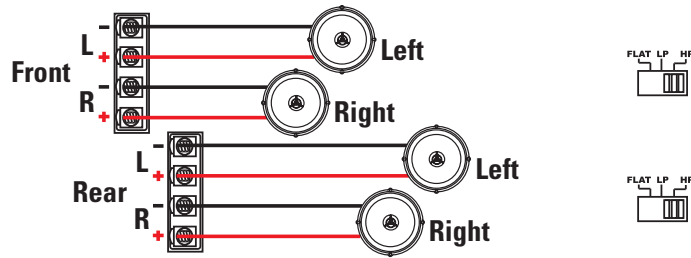

 GTO755.6 II

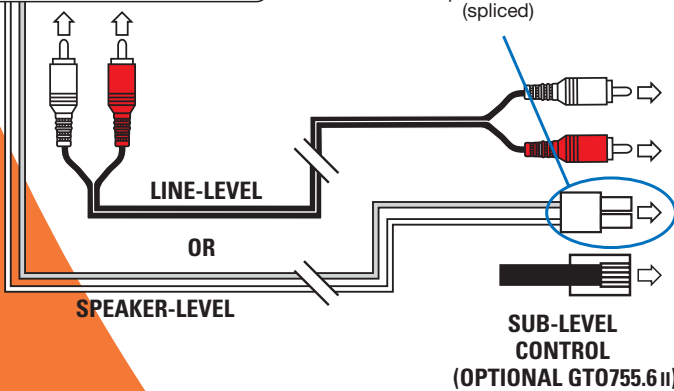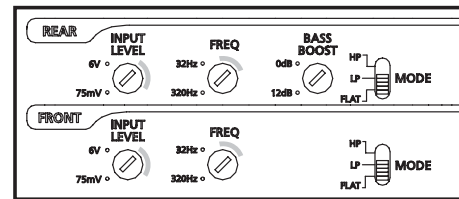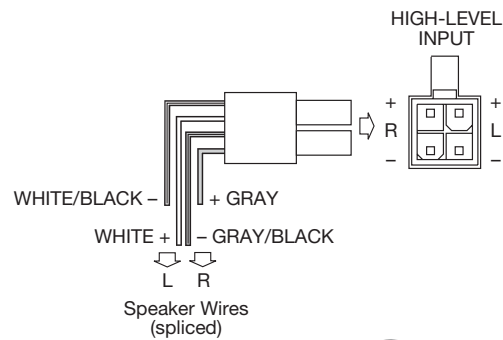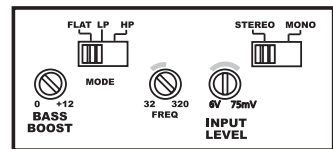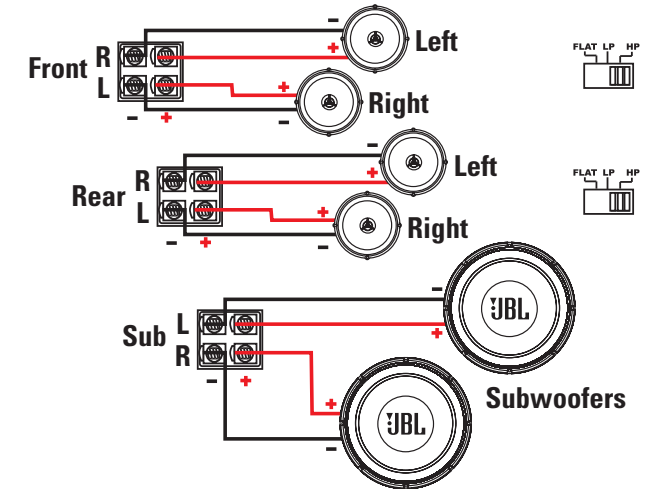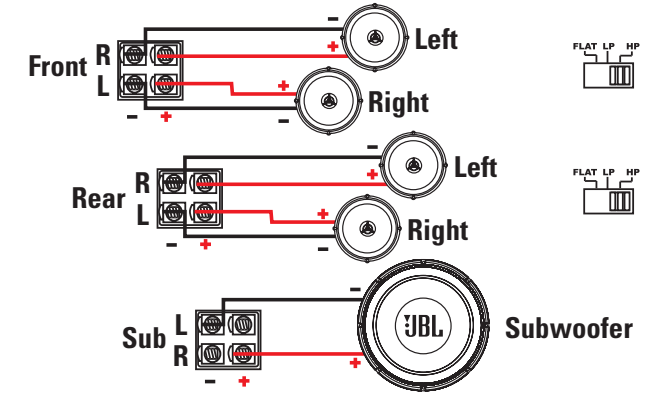

REMOTE TURN-ON

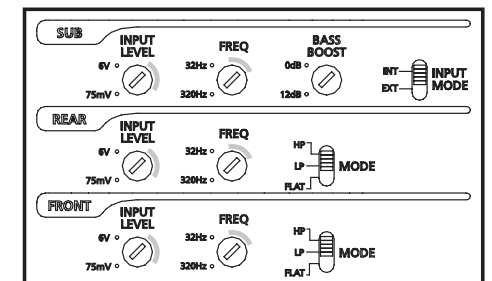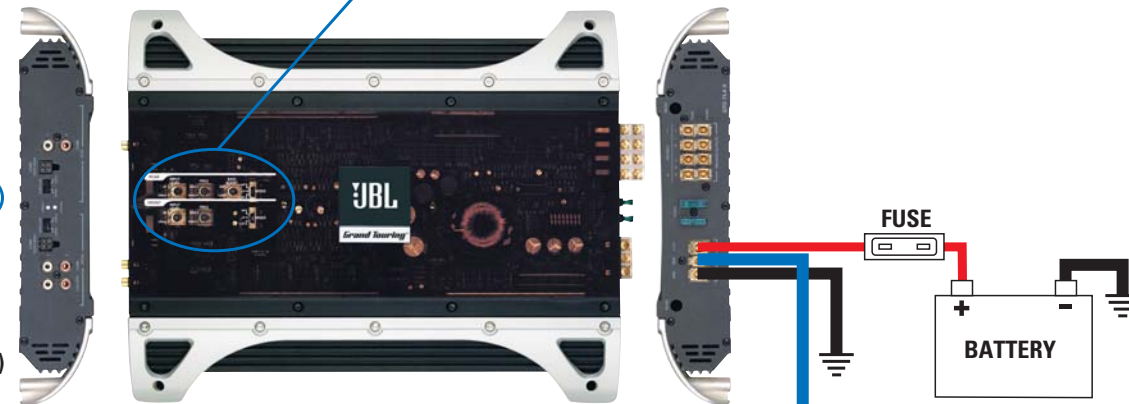


NOTE: Minimum speaker load for all GTO full-range amplifiers is 2 ohms in stereo or 4 ohms when bridged.


*For additional connection options, please refer to owner's manual.

JBL AMPLIFIER QUICK-START GUIDE


GTO301.1 II, GTO601.1 II and GTO1201.1 II

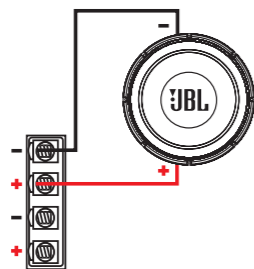


One 4-ohm woofer or one 2-ohm woofer

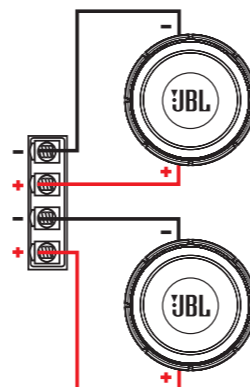


Two 4-ohm woofers = 2-ohm load

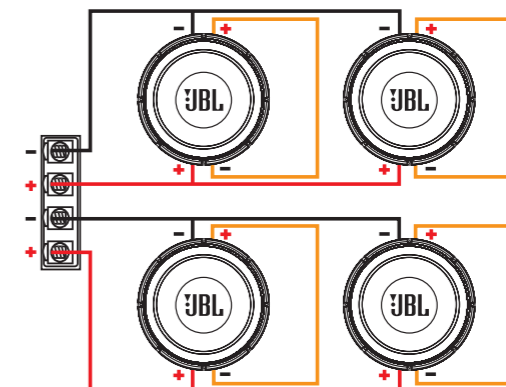


Four 4-ohm DVC woofers = 2-ohm load

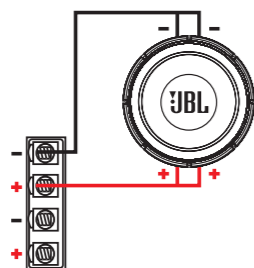

One 4-ohm DVC woofer = 2-ohm load

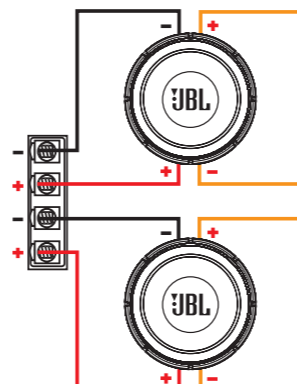

Two 2-ohm DVC woofers = 2-ohm load

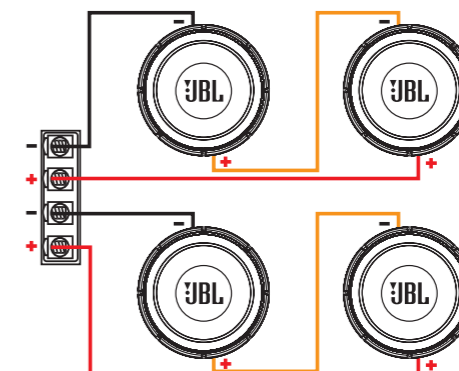

Four 2-ohm woofers = 2-ohm load

NOTE: Minimum speaker load is 2 ohms for all GTO subwoofer amplifiers.

